



2520 - Frontier + UNLIMITED Console


Assembly & Installation Instructions

Compatible With:



Installed and outfitted Frontier Console

1. Insert T-Connectors into side panels.

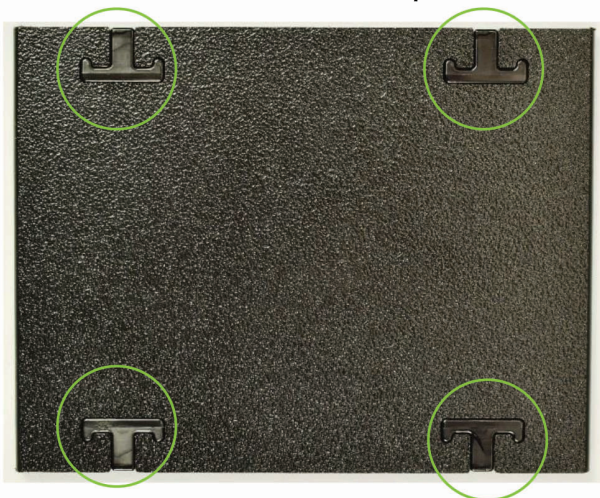

2. Connect Side Panels to Bottom Panel as shown, fasten using 4 self-tapping screws through bottom into T-Connectors.



3. Place top panel on side panels, fasten using self-tapping screws through top into T-Connectors.



4. Install bungee webbing in front and back. Tie knots on ends below the bottom panel.



5. Install 8" Track sections using 8-32 machine screws with lock nuts. Position on sides and your choice of front or back.



6. a) Install Washer and Rubber Spacer onto Mighty Bolt. Insert into bow end of Freedom Track.




b) Install 2.5" Truss Bolt in Freedom Track, followed by plastic spacer and rubber spacer. Secure console with Mighty Knobs.



CellBlok Mounting Locations:

To mount CellBlok below console: Install using two holes on the forward part of the console panel.

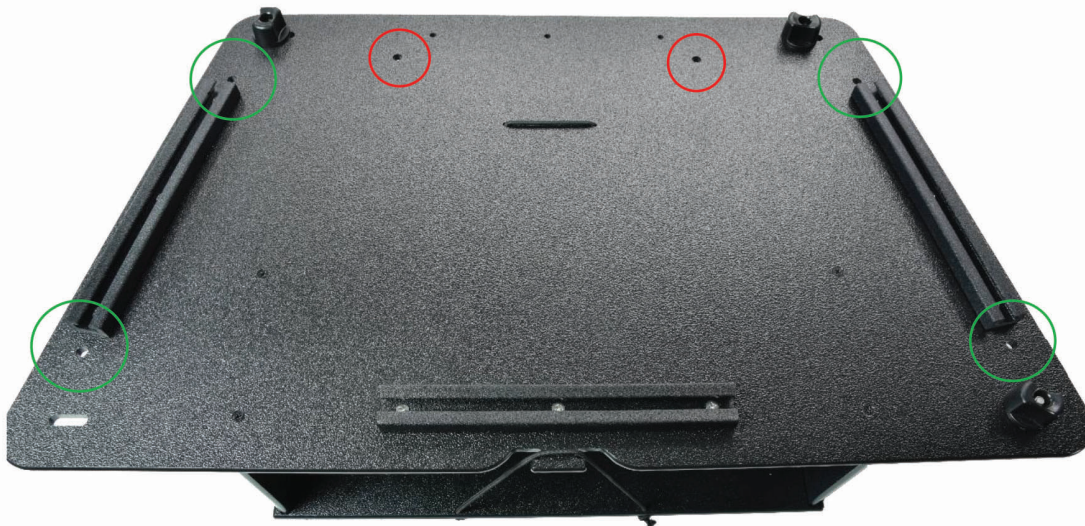

To mount CellBlok on top of console: If mounting on top, do not install track on whichever side you choose to mount the CellBlok. Install using two holes on the left or right side of console.