


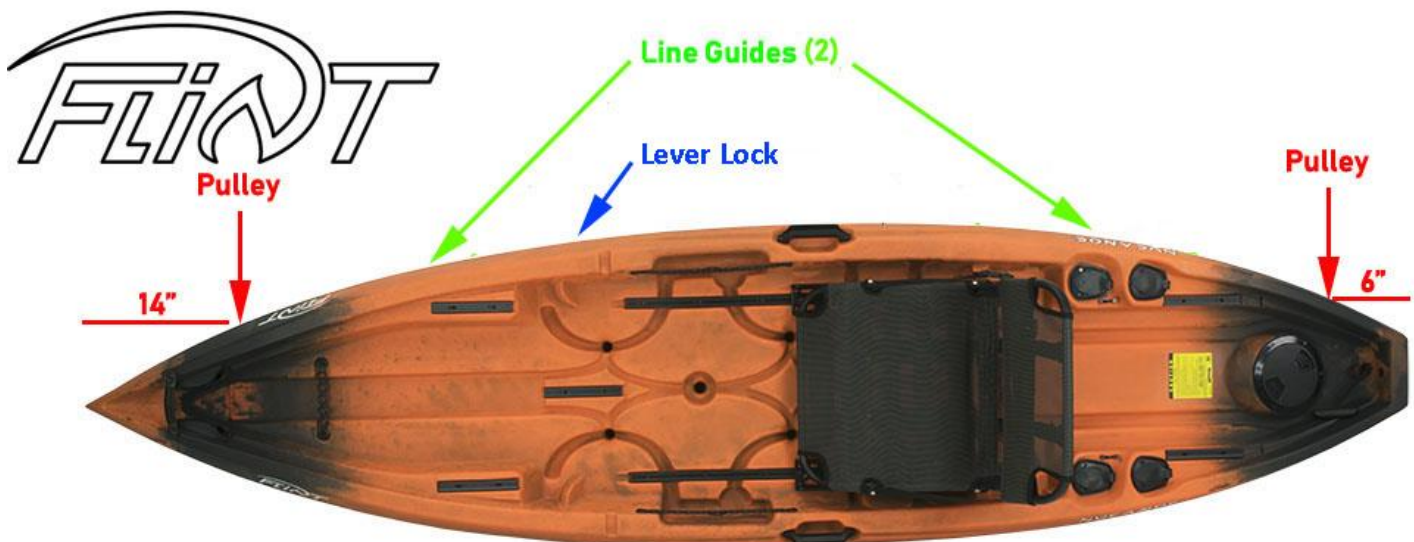

7325 - Lever Lock Anchor Trolley

Installation Instructions – Install on either side of boat


1. Using provided self-tapping screws, install Pulleys at bow and stern of boat just above part line (**below part line for Pursuit**) at spacing indicated for your model (see below and back).
2. Using provided self-tapping screws, install line guides just above part line (below for Pursuit) in positions indicated for your model (see below and back). The placement does not have to be exact for optimal performance, but line guides should be positioned at the same height above part line (below for Pursuit) to ensure that the cord moves freely. **For Flint Owners:** anchor trolley cord should run just below side handle and above part line.
3. Position Lever Lock above part line (below for Pursuit) in an accessible location (between the side handle and logo is ideal for most users). Feed cord through Lever Lock then install Lever Lock with provided self-tapping screws.
4. From the Lever Lock, feed bow end of cord through Line Guide(s) and Pulley (top to bottom), and stern end through Line Guides and Pulley.
5. Bring cord ends to center and through holes on Rope Ring, back to front. Tie off Bow end. Pull snug and tie off stern end.
6. **Ready for the water!** The ring secures under Lever Lock for transport and when not in use. The cord may need to be tightened after initial uses.




7325 - Lever Lock Anchor Trolley

Installation Instructions – Install on either side of boat.

F10

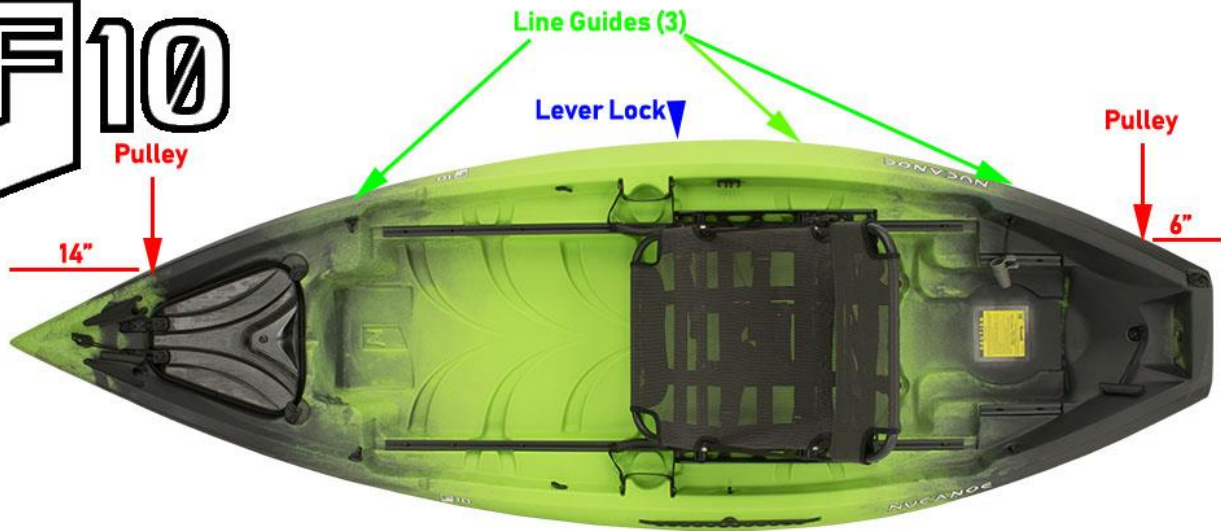

FRONTIER

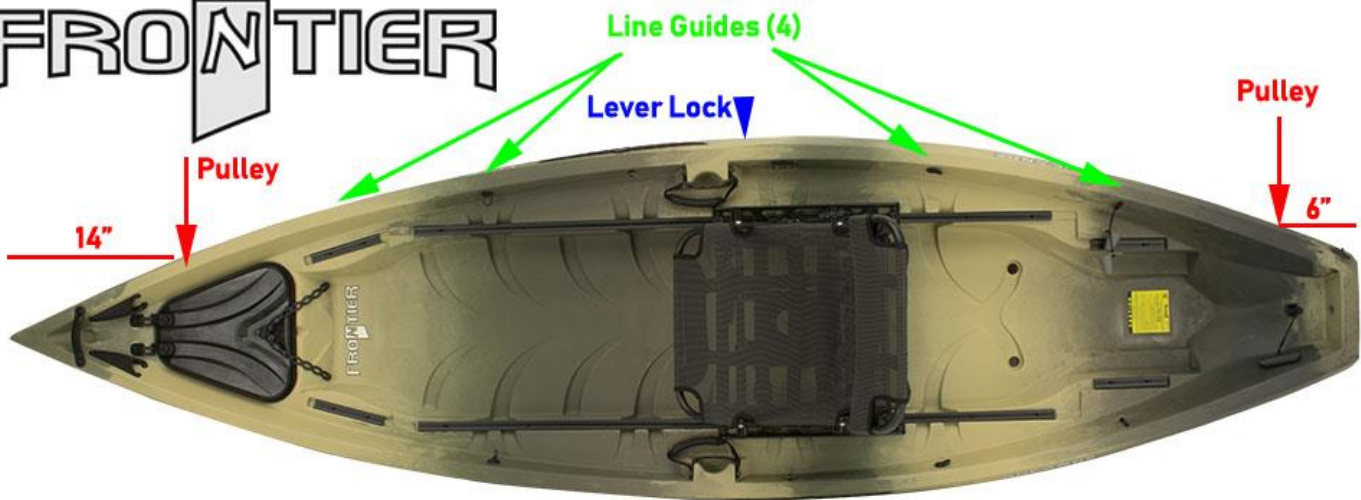

PURSUIT

