

# NUCANOE QUICKCONNECT

Included Hardware: (1) Steering Cable (1) Steering Handle (1) QC Transom Assembly (1) QC Swing Arm

Note: If installing Foot Steering, skip steps 1 and 2.

## 1. Attach Steering Cable to Steering Handle


Attach the Steering Cable on the inner side of the Steering Handle using existing screw and locknut.



## 2. Attach Steering Assembly to Gunwale

Attach steering handle to mounting receivers on the port side gunwale using included  $\frac{3}{4}$ " truss screws.

*\*Note: For 2018 and prior models, #4080 Gunwale Track Mount is required to install steering handle. Scan QR code to purchase:*

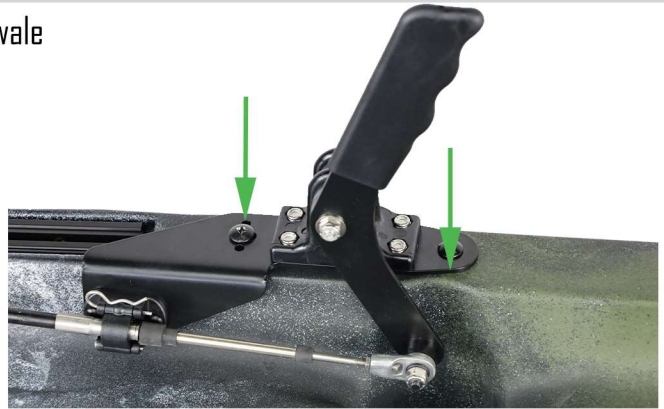

## 3. Insert Transom Plug




#### 4. Install Transom Assembly

a. Install model specific transom bracket over transom of kayak.



b. Insert hex bolt from the outside, and secure with washers and Tri-knob.

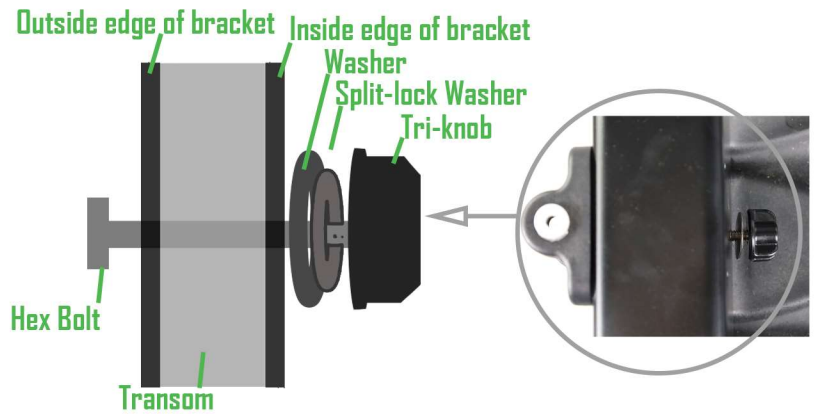


c. Attach swing arm to transom bracket. Insert 5-1/2" Hex Bolt from the top (making sure it seats into hex-shaped recess) and secure with nylon thumb screw from the bottom.



#### 5. Attach Steering Cable to Swing Arm

a. Push sleeve back on ball joint connector, then insert steering cable and release the sleeve.

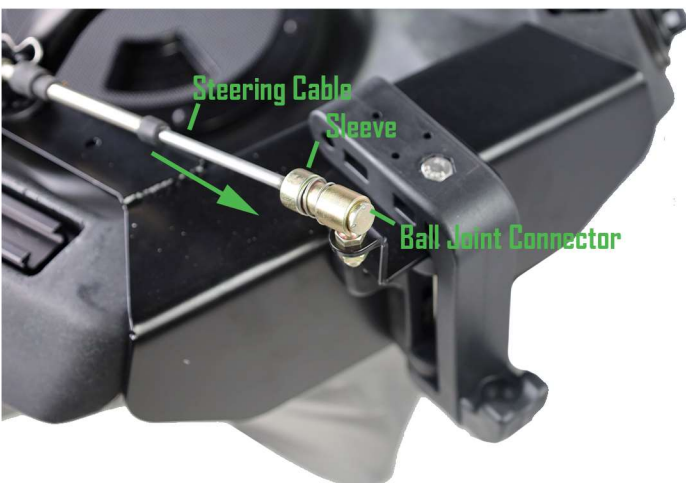

b. Place steering cable in bracket clamp and secure with cotter pin.

