

#3312 Quick Release Kit for 360 Seats



HWP 1: [4] 1 7/8" Hex Bolts [4] Washer [4] Thin Locknut

HWP 2: [4] 2.25" Hex Bolt

HWP 3: [4] 1.75" Hex Bolts


HWP 4: [8] Washer [4] Locknut

1. Remove seat from boat and detach seat base.

2. Install QR Bracket onto seat base. Tighten using two 7/16" wrenches.


Quick Release Bracket to FUSION Base:

Use HWPs 3 & 4

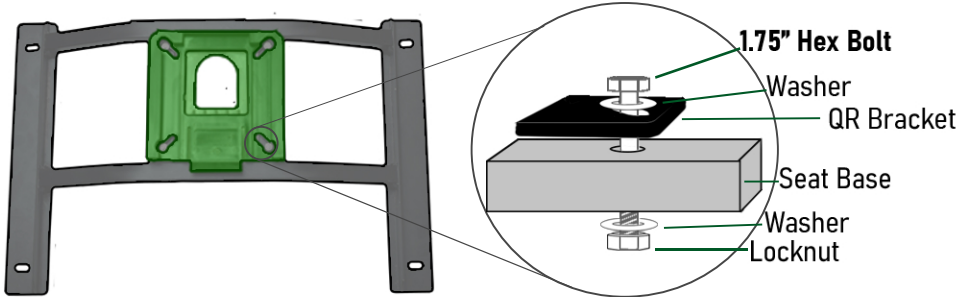

Quick Release Bracket to CH Base:

Use HWPs 2 & 4

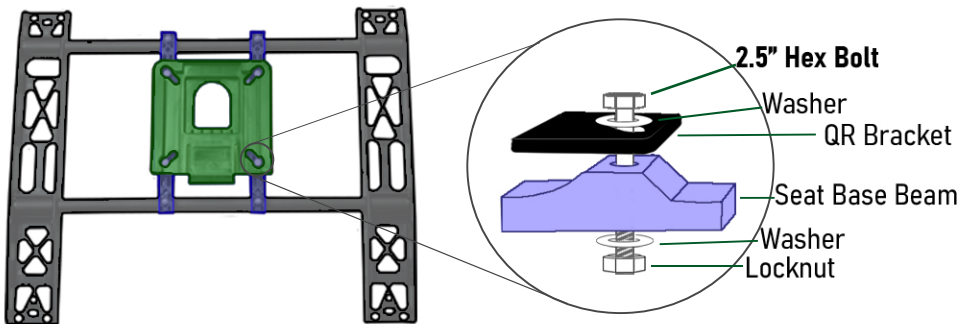

Pinnacle Seat to Swivel:

Use HWP 1

1. Secure swivel to **seat cross beams**.

Install bolt from the top, making sure hex head seats into hex recess.

